

SCREENSIZE System Variable — GstarCAD 2027

SCREENSIZE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SCREENSIZE

Function Description:

The SCREENSIZE system variable is used to store the size(X and Y) of current viewport by pixels.
(Read-Only)

Type	2D point
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)