

SELECTIONANNODISPLAY System Variable — GstarCAD 2027

4251 kbadmin September 25, 2026 [System Variable Reference](#) 0 12

SELECTIONANNODISPLAY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SELECTIONANNODISPLAY

Function Description:

The SELECTIONANNODISPLAY system variable is used to control whether alternate scale representations are temporarily displayed in a dimmed state when annotative objects selected.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

0: off

1: on

The dimmed degree is determined by XFADECTL system variable.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4251>