

SELECTIONAREAOPACITY System Variable — GstarCAD 2027

4253 kbadmin September 25, 2026 [System Variable Reference](#) 0 7

SELECTIONAREAOPACITY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SELECTIONAREAOPACITY

Function Description:

The SELECTIONAREAOPACITY system variable is used to control the opacity of selection area in window selection and crossing selection.

Type	Integer
Saved in	Registry
Initial value	25
Range	0 ~ 100

The smaller of the opacity value, the more transparent of selection area. If specified it to be 100, the selection area become completely opaque. To view the effect, the SELECTIONAREA system variable must be turned on.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4253>