

# SELECTIONCYCLING System Variable — GstarCAD 2027

4254 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

## SELECTIONCYCLING System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SELECTIONCYCLING

### Function Description:

The SELECTIONCYCLING system variable is used to control the display option associated with overlapped objects and cycling selection.

|               |          |
|---------------|----------|
| Type          | Integer  |
| Saved in      | Registry |
| Initial value | 2        |
| Range         | 0,1,2    |

The SELECTIONCYCLING system variable is used to control the display option associated with overlapped objects and cycling selection.

### System Variable Value:

- 0:** disabled display options
  - 1:** only display profiles
  - 2:** display marks and selection dialog box
- Pressing Ctrl+W key to switch current setting on and off.
- When the setting of SELECTIONCYCLING is a negative value, close cycling selection, but the setting will be stored.

## Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4254>