

SHADEEDGE System Variable — GstarCAD 2027

SHADEEDGE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SHADEEDGE

Function Description:

The SHADEEDGE system variable is used to control the shading of edges.

Type	Integer
Saved in	Drawing
Initial value	3
Range	0,1 ,2,3

System Variable Value:

- 0:** shade faces but do not highlight edges
- 1:** shade faces and draw edges by background color
- 2:** do not hatch faces but draw edges by object color
- 3:**shade faces by object color and draw edges by background color

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4260>