

SHORTCUTMENU System Variable — GstarCAD 2027

SHORTCUTMENU System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SHORTCUTMENU

Function Description:

The SHORTCUTMENU system variable is used to control whether the shortcut menus of Default mode, Edit mode, and Command modes are available in drawing area.

Type	Integer
Saved in	Registry
Initial value	11
Range	0 ~ 31

System Variable Value:

- 0:** disable all shortcut menus of Default mode, Edit mode, and Command mode
- 1:** enable shortcut menus of Default mode
- 2:** enable shortcut menus of Edit mode
- 4:**enable shortcut menus of Command mode once there is active command
- 8:** enable shortcut menus of Command mode once there is active command
- 16:** enable shortcut menus of Command mode when pressing right key of point device for enough time

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4263>