

SHOWLAYERUSAGE System Variable — GstarCAD 2027

SHOWLAYERUSAGE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SHOWLAYERUSAGE

Function Description:

The SHOWLAYERUSAGE system variable is used to display icons to indicate whether the layer is in use in layer property manager.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** disable it to improve performance in layer property manager
- 1:** enable it to display the icon indicating whether the layer is in use

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4266>