

SIGWARN System Variable — GstarCAD 2027

SIGWARN System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SIGWARN

Function Description:

The SIGWARN system variable is used to control whether to send warning when opening a file attached with digital signature.
Users can use Open and Save tab in Options dialog box to set this system variable by Display digital signature information option.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** do not send warning when opening a file with valid digital signature
- 1:** send warning

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4269>