

SMOOTHMESHGRID System Variable — GstarCAD 2027

SMOOTHMESHGRID System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SMOOTHMESHGRID

Function Description:

The SMOOTHMESHGRID system variable is used to set the maximum smoothness of underlay mesh facet grid displayed in 3D mesh objects.

Type	Integer
Saved in	User-settings
Initial value	3
Range	0,1,2,3,4

System Variable Value:

- 0:** never display underlay mesh facet grid
 - 1:** display facet grid for smoothness level of 0 and 1
 - 2:** display facet grid for smoothness level of 2 or lower
 - 3:** display facet grid for smoothness level of 3 or lower
 - 4:**display facet grid for smoothness level of 4 or lower
- This system variable can used to help display smooth surfaces. Users can simplify display of underlay facet grid when dealing with mesh objects with high density.
- According to expected smooth level, any value can be entered. It has no effect on mesh smoothness. But it can not exceed SMOOTHMESHMAXLEV value.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4274>