

SNAPANG System Variable — GstarCAD 2027

SNAPANG System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SNAPANG

Function Description:

The SNAPANG system variable is used to set the snap and grid rotation angle in current viewport relative to current UCS settings.

Type	Real
Saved in	Drawing
Initial value	0.0000

In specifying a none zero value for SNAPANG system variable, it will not display straight line grid.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)