

SNAPBASE System Variable — GstarCAD 2027

SNAPBASE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SNAPBASE

Function Description:

The SNAPBASE system variable is used to set the snap and grid original point for the current viewport relative to current UCS settings.

Type	2D point
Saved in	Drawing
Initial value	0.0000,0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)