

SNAPSTYL System Variable — GstarCAD 2027

SNAPSTYL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SNAPSTYL

Function Description:

The SNAPSTYL system variable is used to set grid and grid snap to rectangular or isometric for current viewport.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0: rectangular
- 1: isometric

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4282>