

SNAPTTYPE System Variable — GstarCAD 2027

SNAPTTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SNAPTTYPE

Function Description:

The SNAPTTYPE system variable is used to set snap type to rectangular or polar for current viewport settings.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** grid or standard rectangular snap
- 1:** polar snap, snap along grid angle increment

Use PolarSnap combined with grid track and object snap track.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4283>