

SOLIDHIST System Variable — GstarCAD 2027

SOLIDHIST System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SOLIDHIST

Function Description:

The SOLIDHIST system variable is used to control whether to keep its history record of original parts for new composite solids.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

When set to be 1, all composite solids created will keep their original parts objects history record. Users can access those part objects for modifying solids.

System Variable Value:

- 0:** set History Record property set to be none for new solids. It will not keep history record
- 1:** set History Record property set to be Record for new solids. Solids will kept their original objects history record.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4286>