

SPACESWITCH System Variable — GstarCAD 2027

SPACESWITCH System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SPACESWITCH

Function Description:

The SPACESWITCH system variable is used to control whether to access the model space by double-clicking in a layout viewport.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0: Prevent access to model space
- 1: Allow access to model space

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4288>