

SPLINETYPE System Variable — GstarCAD 2027

SPLINETYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SPLINETYPE

Function Description:

The SPLINETYPE system variable is used to set the curve type generated by Spline option of PEDIT command.

Type	Integer
Saved in	Drawing
Initial value	6
Range	5,6

System Variable Value:

- 5: quadratic B-spline
- 6: cubic B-spline

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4291>