

STANDARDSVIOLATION System Variable — GstarCAD 2027

4298 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

STANDARDSVIOLATION System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > STANDARDSVIOLATION

Function Description:

The STANDARDSVIOLATION system variable is used to control whether to notify standard violation in current drawing when creating or modifying non-standard objects.

Type	Integer
Saved in	Registry
Initial value	2
Range	0,1,2

The modification of this system variable will have effect when checked Display Icons from Services in the Tray Settings dialog box.

System Variable Value:

- 0:** close notifications
- 1:** display notifications when standards violation occurred in a drawing
- 2:**display icons in Tray in status bar when opening a drawing associated with standard, or creating or modifying non-standard objects

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4298>