

SURFACEASSOCIATIVITYDRAG System Variable — GstarCAD 2027

4303 kbadmin September 25, 2026 [System Variable Reference](#) 0 20

SURFACEASSOCIATIVITYDRAG System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SURFACEASSOCIATIVITYDRAG

Function Description:

The SURFACEASSOCIATIVITYDRAG system variable is used to set the dragging preview behavior of associated surfaces.

Type	Parameter
Saved in	Drawing
Initial value	1
Range	0,1,2

This system variable can control the surface preview method of surfaces or all associated surfaces when dragging a selected surface. Disabling preview can enhance performance.

System Variable Value:

- 0:** do not display preview. It will refresh after dragging.
- 1:** only preview the first associated surface dragging. All other associated surface will not move after dragging.
- 2:** preview all associated surfaces dragging.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4303>