

SURFTAB1 System Variable — GstarCAD 2027

SURFTAB1 System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SURFTAB1

Function Description:

The SURFTAB1 system variable is used to set how many tables will be generated by RULESURF and TABSURF commands.

Type	Integer
Saved in	Drawing
Initial value	6

It also set the mesh density in M direction for REVSURF command.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)