

SVGTEXT System Variable — GstarCAD 2027

SVGTEXT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > S System Variables > SVGTEXT

Function Description:

The SVGTEXT system variable is used to whether SHX text is converted to TTF text when exporting drawings to SVG files.

Type	Integer
Saved in	Registry
Initial value	0

System Variable Value:

- 0:** Export shaped text as line segment entities when exporting drawings to SVG format.
- 1:** Shaped text is exported as text entities when the drawing is exported to SVG format.

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4310>