

DCANGULAR Command — GstarCAD 2027

4322 kbadmin September 25, 2026 [Command Reference](#) 0 13

DCANGULAR Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > D Command > DCANGULAR

Function Description:

Constrains the angle between line or polyline segments, the angle swept out by an arc or a polyline arc segment, or the angle between three points on objects.

Command Access:

Menu Item: Parametric(P) > Dimensional Constrains(D) > Angular(N)

Ribbon: Parametric > Dimension > Angular

Toolbar: /

Command Line: DCANGULAR

Command Alias: /

Command Prompts:

Select first line or arc or[3Point(3P)]<3Point>: Specifies the first line to be constrained.

Select second line: Specifies the second line to be constrained.

Operation Steps:

1. Select two lines as shown to add Angular constraints.

2. The angles between the lines will be constrained.

Other versions with matching text

[2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4322>