

DIMJOGLINE Command — GstarCAD 2027

4363 kbadmin September 25, 2026 [Command Reference](#) 0 15

DIMJOGLINE Command

[GstarCAD 2027](#) · [Command Reference](#)

Commands > D Command > DIMJOGLINE

Function Description:

This command is used to add or remove a jog line in a linear or aligned dimension. The jog line means a break in a dimensioned object. The jogged dimension value represents the actual distance of the object, rather than the distance measured in the drawing.

Command Access:

Menu: Dimension > Jogged Linear

Ribbon: Annotation > Dimension > DIMJOGLINE

Toolbar: Dimension > Jogged Linear

Command: DIMJOGLINE

Alias: /

Command Prompts:

Select dimension to add jog or
[Remove]:

Select dimension to add jog

Specifies the linear or aligned dimension to add a jog. You are prompted to Specify the jog location. Users can press ENTER to place the jog at the midpoint between the dimension text and the first extension line or place the jog at the midpoint of the dimension line that based on the location of the dimension text.

Select dimension to remove jog

Removes a jog from the specified linear or aligned dimension.

Related References?

- [Commands about](#)

[Jogged Linear Dimensions](#)

Related Tasks?

- [To Work with Jogged Linear Dimensions](#)

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4363>