

Control Lineweights — GstarCAD 2027

4418 kbadmin September 25, 2026 [User Guide](#) 0 21

Control Lineweights

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Create and Modify Objects > Control the Properties of Objects > Control Lineweights

Lineweight is used to control the thickness of object's lines in both displaying and plotting.

[Overview of Lineweights](#)

[Display Lineweights](#)

You can turn on and off the lineweights in a drawing.

[Set the Current Lineweight](#)

The current lineweight is the lineweight used for any newly drawing objects.

[Change the Lineweight of an Object](#)

If you want to change the lineweight of an object, you can move it to another layers, modify the lineweight of the layer the object is on or choose another lineweights for the object.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4418>