

Display Lineweights — GstarCAD 2027

4434 kbadmin September 25, 2026 [User Guide](#) 0 9

Display Lineweights

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Create and Modify Objects > Control the Properties of Objects > Control Lineweights > Display Lineweights

You can turn on and off Lineweights in a drawing use the "Line Weight" button on the status bar. The plotting of lineweights is not affected by this setting.

In model space, a 0-value lineweight is displayed as one pixel. Regeneration time increases with lineweights that are represented by more than one pixel. When you work on a complex drawing, it is recommended to turn off the display of lineweights to improve the performance.

Display Lineweights in Model Space

In model space, the Lineweight does not change with the zoom factor. For example, a lineweight value is represented by a width of four pixels, it is always displayed using four pixels, it does not matter how far you zoom in.

Display Lineweights in plot previews

In plot previews, Lineweights are displayed in real-world units, and the lineweight display changes with the zoom factor. You can use the *plot styles(STYLESMANAGER)* to apply different line join and line end styles to objects with lineweights.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4434>