

Grid and Snap Space — GstarCAD 2027

4458 kbadmin September 25, 2026 [User Guide](#) 0 11

Grid and Snap Space

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Create and Modify Objects > Use Precision Tools > Grid and Snap Space

To improve drawing efficiency, you can display a rectangular grid and snap it. You can also control its spacing, angle and alignment.

The grid helps you align objects and determine the distances between them. When snap mode is on, the movement of the crosshairs is restricted to grip point. Grid mode just controls the display of grid line or point. If snap mode is on, it works whenever the grid line is displayed or not. They are often turned on at same time.

Set Grid and Snap Spacing

You can set the spacing of grid and snap, and the settings do not have to match. Darker lines called *major line* display at intervals, you can change the spacing of major line.

Change Snap type

If you want to draw a isometric drawing of 3D object, you can switch snap type to Isometric.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4458>