

Load Linetypes — GstarCAD 2027

4460 kbadmin September 25, 2026 [User Guide](#) 0 3

Load Linetypes

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Create and Modify Objects > Control the Properties of Objects > Work with Linetypes > Load Linetypes

You can load linetypes at the start of a project or when you need them.

Linetypes are stored in an LIN (linetype definition) file, you can load linetypes in a LIN file whenever you want to use it.

Depending on what measurements you are using, you can choose the linetype definition files gcad.lin (imperial) and gcadiso.lin (metric) units, which are both available in this program.

If you want to get rid of unreferenced linetype information, you can use PURGE or delete the linetype in the Linetype Manager. You can not remove ByBlock, ByLayer and Continuous linetypes.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4460>