

Polar — GstarCAD 2027

4474 kbadmin September 25, 2026 [User Guide](#) 0 9

Polar

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Create and Modify Objects > Use Precision Tools > Polar

Polar tracking is used to display temporary alignment paths defined by the polar angles you specify, while you are creating or modifying objects. You can set the angle base direction in the "Drawing Units" dialog box.

Alignment paths and tooltips will be displayed when you move the cursor near the polar angles. To draw your object, you can use the alignment path and tooltip. To find, where a polar alignment path intersects another object, polar tracking with Intersection and Apparent Intersection object snaps can be used.

Specify Polar Angles

The polar angle increments can be set to 90, 45, 30, 22.5, 18, 15, 10 and 5 degrees or other angles which you specify in the "Polar Tracking" tab of the "Drafting Settings" dialog box.

The orientation of 0 depends on the angle you set in the "Drawing Units" dialog box (UNITS). The direction of snap (clockwise or counterclockwise) depends on the units direction you specify when setting units of measurement.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4474>