

ARETABLE Command — GstarCAD 2027

4491 kbadmin September 25, 2026 [User Guide](#) 0 7

ARETABLE Command

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Dimension > Area table

ARETABLE command automatically dimension and count the area of an enclosed object and export the result to a table in the current drawing area.

- The enclosed area or object can be marked with a number or area symbol, and the area table data can be generated at the same time.
- The area data can be exported to a text or table file.
- The values in the table can be changed automatically when the number or area size is changed.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4491>