

Attribute Increment Command — GstarCAD 2027

4500 kbadmin September 25, 2026 [User Guide](#) 0 5

Attribute Increment Command

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Blocks > Attribute Increment

Function Description:

This command helps to specify attribute of blocks with incremental value, and to modify attribute value of blocks according to the sort method. This command can increase block attribute value that contains a number or letter. When ATTINC command is on, as long as the drawing is not closed, when copying, inserting and deleting a block attribute in the drawing, the property number or letter can be updated automatically.

If there are blocks with attributes in the current drawing, the Attribute values increment dialog box is displayed.

Command Access:

Menu: Express > Blocks > Attribute Increment

Ribbon: Insert > Block > Attribute Increment

Toolbar: /

Command: ATTINC

Alias: /

Command Prompts:
/

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4500>