

Change Block Layer — GstarCAD 2027

4519 kbadmin September 25, 2026 [User Guide](#) 0 5

Change Block Layer

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Blocks > Change Block Layer

The bChgLay function can change the block layer.

Operation steps:

- 1.Start the command.
- 2.Input target layer name.
- 3.Select block objects to change layer.
- 4.Enter,the result will be as below.If the target layer exists, the selected block will be moved to the target layer, if a target does not exist, the software will make a new layer automatically and move the block object to the new layer.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4519>