

Change Block Linewidth — GstarCAD 2027

4520 kbadmin September 25, 2026 [User Guide](#) 0 16

Change Block Linewidth

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Blocks > Change Block Linewidth

The bChgWid function can modify block linewidth quickly.

Operation steps:

- 1.Start the command.
- 2.Input a new line width value.
- 3.Select block objects, for which the line widths need to be changed.
- 4.Finish changing the line width.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4520>