

Change Block Text Angle — GstarCAD 2027

4521 kbadmin September 25, 2026 [User Guide](#) 0 18

Change Block Text Angle

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Blocks > Change Block Text Angle

The bChgAng function can change the text rotation angle of the block and it only takes effect on text or mtext, attribute text can't be changed.

Operation steps:

- 1.Start the command.
- 2.Input new text angle (comparative with @)<0>:,here we input 0.
- 3.Select the block to change text angle: thenSelect objects:
- 4.Finish changing the text angle.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4521>