

Coordinate Point (DIMCORD) — GstarCAD 2027

4538 kbadmin September 25, 2026 [User Guide](#) 0 10

Coordinate Point (DIMCORD)

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Coordinate Tools > Coordinate Point

Function Description:

Labels the coordinate point.

Command Access:

Icon:

Menu Item: Express > Coordinate Tools > Coordinate Point

Ribbon: Express > Dimension > Coordinate Point

Toolbar: /

Command Line: DIMCORD

Command Alias /

Command Prompts:

Current settings: dimension text scale<1.0>, dimension text high<3.0>

Specify the coordinate point<Exit>:

Specify the coordinate direction Or [Change Parameter(Q)]<Enter>:

The coordinate point function (DIMCORD) has been improved according to users' suggestions in GstarCAD 2026, and the main improved function points are as follows:

(1) The coordinate point previously used are scattered lines, now with LEADER, not into groups when moving the text block, the leader will also follow, so as to adjust the placement of the labeled text, the following chart:

(2) The “Parameter” setting dialog box supports the adjustment of the scale and text size, and the scale and text size parameters support the memory of the last value, so as to improve the convenience of operation, the interface is as follows:

(3) Add options for Group and Auto Switch

Check the box of Group, the generated coordinate points are labeled as a group, if you do not check the box, they are not grouped;

Check the box of Auto Switch, when the text and labeling line cross, it will be automatically oriented.

(4) Adjust the command line prompt

After executing the command, the current scale and text size are displayed, and the user is no longer forced to set, the user can input Q and enter to modify the parameters if they see that the settings are not reasonable.

Other versions with matching text

[2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4538>