

Detach Leaders from Annotation — GstarCAD 2027

4547 kbadmin September 25, 2026 [User Guide](#) 0 4

Detach Leaders from Annotation

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Dimension > Detach Leaders from Annotation

The QLDETACHSET command is used to detach leader line from mtext, tolerance, or block reference object.

Select objects: Select leader line

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4547>