

Justify Text — GstarCAD 2027

4584 kbadmin September 25, 2026 [User Guide](#) 0 7

Justify Text

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Text tools > Justify Text

TheTJUST command is used to change a text object's justification without changing its position. Works with text, mtext, and attribute definition objects.

Select objects: Use an object selection method

[Start/Center/Middle/Right/TL/TC/TR/ML/MC/MR/BL/BC/BR] <Start>: Choose the new justification

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4584>