

Region Scale — GstarCAD 2027

4599 kbadmin September 25, 2026 [User Guide](#) 0 15

Region Scale

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Modify > Region Scale

You can use the REGSCALE command to select a region of a drawing to be cut and copied to a new location.

Command line prompts as follows:

Specify left up corner point for full-page proof: Select a region from left up to right down corner

Specify the position to copy: Specify any place you want to copy to the selected region

Input zoom scaling, the block and text will zoom together <Enter- No Zoom>: Press Enter to finish the operation

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4599>

