

Scale Text — GstarCAD 2027

4608 kbadmin September 25, 2026 [User Guide](#) 0 3

Scale Text

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Text tools > Scale Text

The SCALETEXT command can be used for single line text and multiline text, you can specify scale center and text height with this command.

Operation steps:

- 1.Start the command.
- 2.Select objects which need to scale.
- 3.Specify scale center.
- 4.Specify the text height.
- 5.Press enter to finish scaling.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4608>