

Text Orientation Adjust — GstarCAD 2027

4627 kbadmin September 25, 2026 [User Guide](#) 0 13

Text Orientation Adjust

[GstarCAD 2027](#) · [User Guide](#)

User Guide > Express tool > Table Tools > Text Orientation Adjust

The BGJS function is used to adjust the alignment of the texts.

Operation steps:

- 1.Start the command.
- 2.Select the text for adjust.
- 3.Enter and the command line will prompt the location mode.
- 4.Here we input "1" to select left alignment.
- 5.The text you specified will align to the left.

Notice:

1. This function can only orient and adjust the table text in the TABLE layer.
2. The distance to the table line using left alignment or right alignment has already been set by the program, if you think that the distance is not suitable, you can use the GstarCAD command to adjust the distance.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4627>