

DATALINKNOTIFY System Variable — GstarCAD 2027

DATALINKNOTIFY System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DATALINKNOTIFY

Function Description:

The DATALINKNOTIFY system variable is used to control the notify about updating or missing data links.

Type	Integer
Saved in	Registry
Initial value	2
Range	0,1,2

System Variable Value:

- 0:** forbid updating data link notification
- 1:** enable data link notification. Notifies users that external data is linked to the current drawing by displaying the data link icon in the lower-right corner of the application window (the notification area of the status bar tray). It will not display balloon message notifications.
- 2:** enable data link notify and balloon message notifications. Notifies users that external data is linked to the current drawing by displaying the data link icon in the lower-right corner of the application window (the notification area of the status bar tray). It also displays a data link file change notification in the area of the drawing where the data link requires updating.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4635>