

DEFAULTLIGHTING System Variable — GstarCAD 2027

DEFAULTLIGHTING System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DEFAULTLIGHTING

Function Description:

The DEFAULTLIGHTING system variable is used to turn on and off the default lighting in place of other lighting.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0: Default lighting is automatically turned off when pointlights, spotlights, distant lights, or the sun are on.
- 1: Default lighting is turned on.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4641>