

# DGNOSNAP System Variable — GstarCAD 2027

## DGNOSNAP System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DGNOSNAP

### Function Description:

The DGNOSNAP system variable is used to determine whether to active object snap mode for geometric drawings that attached DGN reference underlay.

|               |          |
|---------------|----------|
| Type          | Integer  |
| Saved in      | Registry |
| Initial value | 1        |
| Range         | 0,1      |

### System Variable Value:

- 0:** turn off object snap mode for geometric drawings that attached DGN reference underlay
- 1:** turn on object snap mode for geometric drawings that attached DGN reference underlay

### Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4650>