

DIASTAT System Variable — GstarCAD 2027

DIASTAT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIASTAT

Function Description:

The DIASTAT system variable is used to save the exiting way for currently used dialog box.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

0: cangle

1: ok

Note: the DIASTAT system variable will not be applied on standard file selection dialog box (such as "Select file" and "Save as")

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4651>