

DIMADEC System Variable — GstarCAD 2027

DIMADEC System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMADEC

Function Description:

The DIMADEC system variable is used to control the number of precious places displayed in angular dimensions.

Type	Integer
Saved in	Drawing
Initial value	0

System Variable Value:

- 1:** the number of precious places for angular dimensions is specified by DIMDEC
- 0 ~ 8:** specify the displayed number of precious places for angular dimensions (independent of DIMEDC)

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4652>