

DIMALTTD System Variable — GstarCAD 2027

4657 kbadmin September 25, 2026 [System Variable Reference](#) 0 5

DIMALTTD System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMALTTD

Function Description:

The DIMALTTD system variable is used to set the number of decimal places for tolerance in the alternate units of a dimension.

Type	Integer
Saved in	Drawing
Initial value	2 (Imperial) or 3 (Metric)

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4657>