

DIMALTTZ System Variable — GstarCAD 2027

DIMALTTZ System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMALTTZ

Function Description:

The DIMALTTZ system variable is used to control zero suppression for tolerance.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 15

System Variable Value:

- 0:** suppress zero feet and zero inch
 - 1:** include zero feet and zero inch
 - 2:** include zero feet and suppress zero inch
 - 3:** include zero inch and suppress zero feet
- To suppress leading or trailing zeros. Add the following values to one of the preceding values:
- 4:** suppress leading zero
 - 8:** suppress trailing zero

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4658>