

DIMALTZ System Variable — GstarCAD 2027

DIMALTZ System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMALTZ

Function Description:

The DIMALTZ system variable is used to control zero suppression for alternate units in a dimension.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 15

System Variable Value:

- 0:** suppress zero feet and zero inch
 - 1:** include zero feet and zero inch
 - 2:** include zero feet and suppress zero inch
 - 3:** include zero inch and suppress zero feet
 - 4:** suppress leading zero for decimal dimension
 - 8:** suppress trailing zero for decimal dimension
 - 12:** suppress leading and trailing zeros
- The DIMALTZ system variable of 0,1,2, and 3 only have effect on dimensions for inches and feet.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4660>