

DIMASZ System Variable — GstarCAD 2027

DIMASZ System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMASZ

Function Description:

The DIMASZ system variable is used to control size of dimension line and leader arrow. It also controls size of baseline.

Type	Real
Saved in	Drawing
Initial value	0.1800(Imperial) or 2.5000 (Metric)

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)