

DIMATFIT System Variable — GstarCAD 2027

DIMATFIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMATFIT

Function Description:

The DIMATFIT system variable is used to control the text and arrows alignment method when the extension line space is not sufficient to place them.

Type	Integer
Saved in	Drawing
Initial value	3
Range	0,1,2,3

System Variable Value:

- 0:** place the text and arrows outside of extension line
- 1:** move arrow outside of extension line, and then move text
- 2:** move text outside of extension line, and then move arrow
- 4:** move either text or arrows, whichever fits best

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4666>