

DIMAUNIT System Variable — GstarCAD 2027

DIMAUNIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMAUNIT

Function Description:

The DIMAUNIT system variable is used to set unit format for angular dimension.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0 ~ 4

System Variable Value:

- 0:** decimal degrees
- 1:** degrees/minutes /seconds
- 2:** gradians
- 4:** radians

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4667>