

DIMBLK System Variable — GstarCAD 2027

DIMBLK System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMBLK

Function Description:

The DIMBLK system variable is used to set the display of arrow block on the end extension line.

Type	Strings
Saved in	Drawing
Initial value	""

Users can enter a Period "." to restore default settings.
Note: the annotative block can not be used as customized arrow for dimensions and leaders.

System Variable Value:

- "" : closed filled
- "_DOT": dot
- "_DOTSMALL": dot small
- "_DOTBLAN": dot blank
- "_ORIGIN": origin indicator
- "_ORIGIN2": origin indicator 2
- "_OPEN": open
- "_OPEN90": right angle

_OPEN30": open 30
"**_CLOSED**": closed
"**_SMALL**": dot small blank
"**_NONE**": none
"**_OBLIQUE**": oblique
"**_BOXFILLED**": box filled
"**_BOXLANK**": box
"**_CLOSEDBLANK**": closed blank
"**_DATUMFILLED**": datum triangle filled
"**_DATUMBLANK**": datum triangle
"**_INTEGRAL**": integral
"**_ARCHICK**": architectural tick

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4669>